


WIRED REMOTE CONTROLLER

Installation and Owner's Manual

MODEL:

KJR-120G1/TFBG-E(5V) (For high wall models)

KJR-120G2/TFBG-E(12V) (For Duct/Cassette/Floor ceiling models)

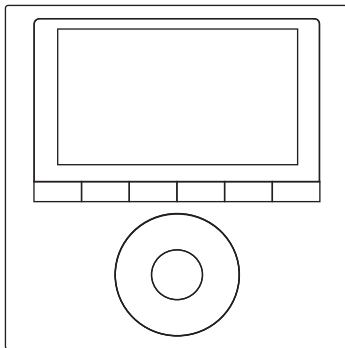

IMPORTANT NOTE:

Read this manual carefully before installing or operating your wired remote controller. Make sure to save this manual for future reference.



- This manual gives detailed description of the precautions that should be brought to your attention during operation.
- To ensure the correct service of the wired controller, read this manual carefully before using the unit.
- Keep this manual after reading for future reference.

CONTENTS

| | |
|--|----|
| 1. SAFETY PRECAUTION..... | 1 |
| 2. INSTALLATION ACCESSORY..... | 2 |
| 3. INSTALLATION METHOD..... | 4 |
| 4. APPENDIX INSTALL THE WIRE CONTROLLER KIT..... | 10 |
| 5. SPECIFICATION..... | 16 |
| 6. WIRED CONTROLLER FEATURES AND FUNCTIONS..... | 17 |
| 7. WIRED CONTROLLER DISPLAY..... | 18 |
| 8. WIRED CONTROLLER BUTTONS..... | 19 |
| 9. PREPARATORY OPERATION..... | 20 |
| 10. OPERATION..... | 21 |
| 11. TIMER FUNCTIONS..... | 27 |
| 12. WEEKLY TIMER..... | 30 |
| 13. FAULT ALARM HANDING..... | 37 |
| 14. TECHNICAL INDICATION AND REQUIREMENT | 37 |

1. SAFETY PRECAUTION

- Read the safety precautions carefully before installing the unit.
- Stated below are important safety issues that must be obeyed.

| | |
|---|---|
|  WARNING | Means improper handling may lead to personal death or severe injury. |
|  CAUTION | Means improper handling may lead to personal injury or property loss. |



WARNING

Please entrust the distributor or professionals to install the unit.
Installation by other persons may lead to imperfect installation, electric shock or fire.
Adhere to this installation manual.
Improper installation may lead to electric shock or fire.
Reinstallation must be performed by professionals.

Do not uninstall the unit randomly.
Random uninstalling may lead to abnormal operation, heating or fire of the air condition.



NOTE

- ① Do not install the unit in a place vulnerable to leakage of flammable gases. Once flammable gases are leaked and left around the wire controller, fire may occur.
 - ② Do not operate with wet hands or let water enter the wire controller. Otherwise, electric shock may occur.
 - ③ The wiring should adapt to the wire controller current. Otherwise, electric leakage or heating may occur and result in fire.
 - ④ The specified cables shall be applied in the wiring. No external force may be applied to the terminal. Otherwise, wire cut and heating may occur and result in fire.
-

2. INSTALLATION ACCESSORY

Select the installation location

Don't install at the place where cover with heavy oil, vapor or sulfured gas, otherwise, this product would be deformed that would lead to system malfunction.

Preparation before installation

1. Please confirm that all the following parts you have been supply.

| No. | Name | Qty. | Remarks |
|-----|---------------------------------|------|------------------------------------|
| 1 | Wire controller | 1 | _____ |
| 2 | Installation and owner's manual | 1 | _____ |
| 3 | Screws | 3 | M4X20 (For Mounting on the Wall) |
| 4 | Wall plugs | 3 | For Mounting on the Wall |
| 5 | Screws | 2 | M4X25 (For Mounting on switch box) |
| 6 | Plastic screw bars | 2 | For fixing on switch box |
| 7 | Battery | 1 | |
| 8 | The connection cable | 1 | (Optional) |

2. Prepare the following assemblies on the site.

| No. | Name | Qty.(embedded into wall) | Specification (only for reference) | Remarks |
|-----|---|--------------------------|------------------------------------|---------|
| 1 | Switch box | 1 | _____ | _____ |
| 2 | Wiring Tube(Insulating Sleeve and Tightening Screw) | 1 | _____ | _____ |

2. INSTALLATION ACCESSORY

WIRED CONTROLLER INSTALLATION PRECAUTION

1. This manual provides the wired controller installation method. Refer to the wiring diagram in this installation manual to wire the wired controller with the indoor unit.
2. The wired controller works in a low voltage loop circuit. Do not connect directly to 208/230V and 460V. Do not wire this kind of wire into a loop. Wiring clearance between the configured tubes should range 11.81–19.69 inches (30–50 cm) or above.
3. The shielded wire of the wired controller must be properly grounded.
4. Upon finish the wire controller connection, do not employed tramegger to detect the insulation.

3. INSTALLATION METHOD

1. Wired Remote Controller Dimensions

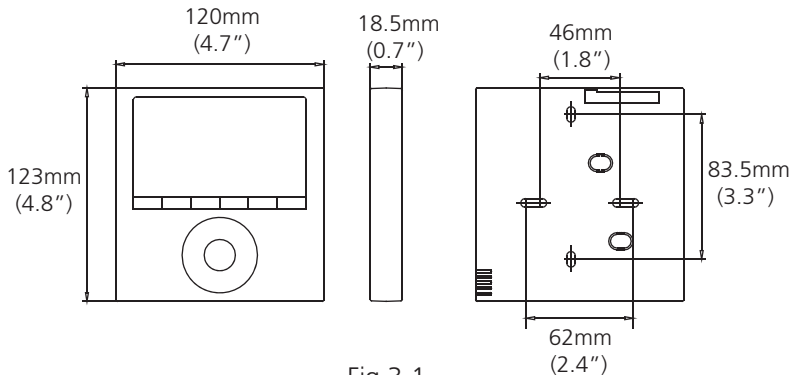


Fig 3-1

2. Wiring Connection Diagram


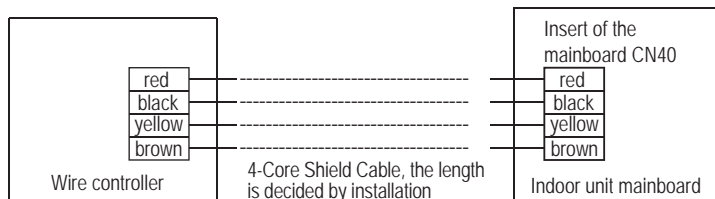



Fig 3-2

3. INSTALLATION METHOD

3. Wiring figure

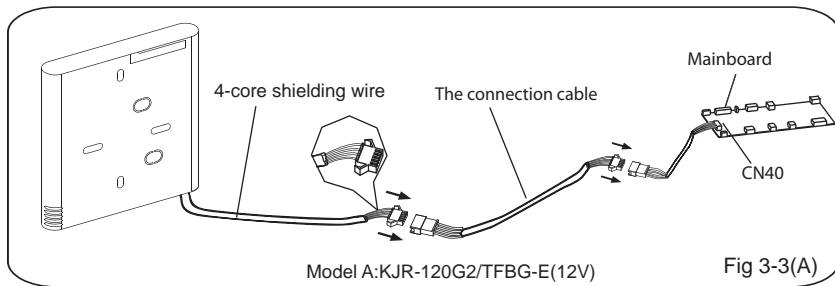

- Connect the female joint of the wires group from the mainboard with the male joint of the connective wires group. (See Fig.3-3(A))
- Connect the other side of the connective wires group with the male joint of the wires group leads from the wire controller.(See Fig.3-3(A))

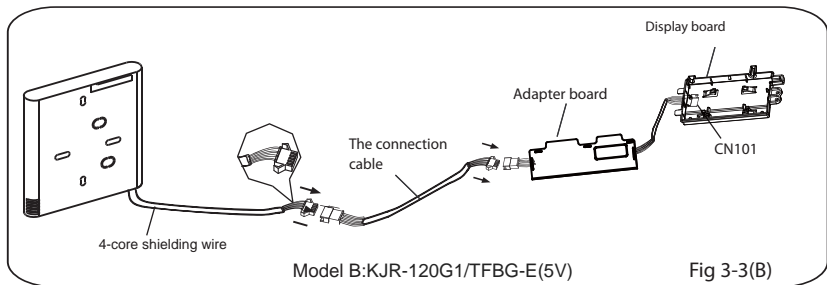

3. INSTALLATION METHOD

- Install the Adapter Board and the Display Board on the High Wall (See the Appendix for instructions).
- Connect the female joint of the wires group from the adapter board with the male joint of the connective wires group. Next, connect the other side of the adapter board with the display board. (See Fig.3-3(B))
- Connect the other side of the connective wires group with the male joint of the wires group leads from the wire controller. (See Fig.3-3(B))

4. Wire controller upper part Remove

- Insert a flat screwdriver into the slots in the lower part of the wire controller (2 places).
- Remove the upper part of the wire controller (Fig.3-4)

NOTE: The PCB is mounted in the upper part of the wired controller. Be careful not to damage the board with the screwdriver.

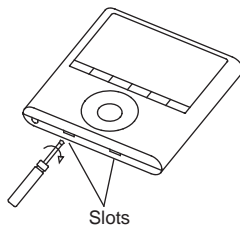


Fig 3-4

5. Fasten the wire controller back plate

- For surface mounting, fasten the back plate on the wall with the 3 screws (M4x20) and plugs. (Fig.3-5)

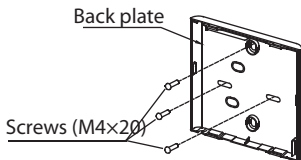


Fig 3-5

3. INSTALLATION METHOD

- For switch box mounting, fasten the back plate on the switch box with 2 screws (M4x25) and fasten it on the wall with 1 screw (M4x20). (Fig.3-6)

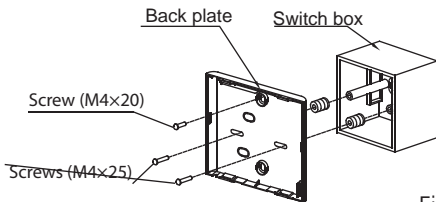


Fig 3-6

NOTE: Place on a flat surface. Be careful not to distort the wire controller's back plate by over-tightening the mounting screws.

6. Battery installation

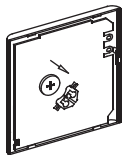


Fig 3-7




- Place the battery in the unit and ensure the positive side of the battery is in accordance with the polarity markings.(See Fig.3-7)
- Set the correct time before operating. Batteries in the wired controller can maintain the correct time during a power failure. When the power is restored and the displayed time is not correct, replace the battery.

3. INSTALLATION METHOD

7. Wire the indoor unit

There are three methods:

- 1 from the rear;
- 2 from the bottom;
- 3 from the top;

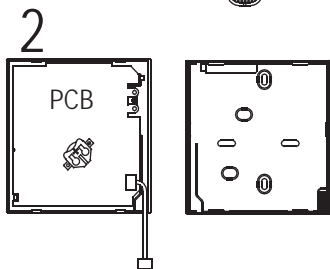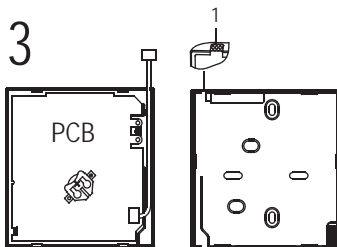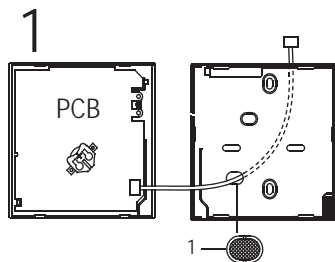

4. Notch the part for the wiring to pass through with a nipper tool.

3. INSTALLATION METHOD

NOTE: DO NOT allow water to enter the remote control. Use the trap and putty to seal the wires.

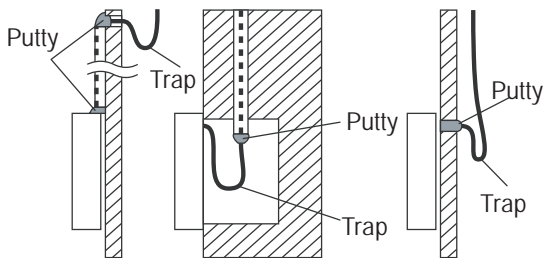


Fig 3-8

8. Reattach the wire controller's upper part

- While adjusting and mounting the upper case, avoid clamping the wiring during installation. (Fig 3-9)

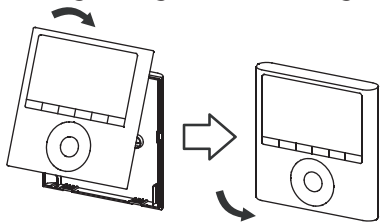


Fig 3-9

IMPORTANT: All the pictures in this manual are for illustration purposes only. Your wire controller may differ slightly.

4. APPENDIX

INSTALL THE WIRE CONTROLLER KIT

1. Open the front panel.



2. Disconnect the wire from the main controller board.



4. APPENDIX

INSTALL THE WIRE CONTROLLER KIT

3. Identify the components. From left to right, the wired controller, convert board and the display board.



4. Identify connections on the Display Board.
- CN201 is the display board connection to the main board wire (on the display board).



4. APPENDIX

INSTALL THE WIRE CONTROLLER KIT

- CN101 is the display board connection to the convert board wire (on the display board).



5. Uninstall the display board from the front panel. Keep the display board holder.



4. APPENDIX

INSTALL THE WIRE CONTROLLER KIT

6. Carefully bend and break off the rectangular section (upper left section with two diagonal holes) from the display board.



NOTE: Break off the upper left hand rectangle (section with the two holes marked with a red rectangle).

7. Replace the old display board (for the New Display board provided) and secure with the clips. To uninstall the clips, push the clips inward.

NOTE: There are 4 clips just above the numeric display (88) which run the length of the holder.



4. APPENDIX

INSTALL THE WIRE CONTROLLER KIT

8. Before assembling mounting back on the Front Panel, remove the display board's screen cover.



9. Connect the Wires to the Adaptor Board.
- Connect the wire coming from the Display board to the Convert Board (this connection consists of 5 wires).



4. APPENDIX

INSTALL THE WIRE CONTROLLER KIT

- b. Connect the wire coming from the Wired Remote Controller to the Convert Board (this connection consists of 4 wires).



10. Once the ports are connected, install the cover.



11. Mount the new display board and convert board to the Front Panel.
12. Connect the wired remote controller to the display board and the convert board.



13. Connect the wire from the main controller board (see Fig 3-2).


5. SPECIFICATION

| | |
|---------------------|--------------------|
| Input voltage | DC 5V/DC 12V |
| Ambient temperature | 23~110°F (-5~43°C) |
| Ambient humidity | RH40%~RH90% |


Wiring specifications

| Wiring type | Size | Total length |
|------------------------------|--|---------------|
| Shielded vinyl cord or cable | 0.029 in-0.74mm (0.75-1.25mm ²) | ≤66 ft (20m) |
| | | ≤164 ft (50m) |

6. FEATURE AND FUNCTION OF THE WIRED CONTROLLER

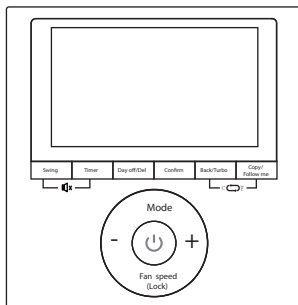

MODEL: KJR-120G2/TFBG-E(12V)

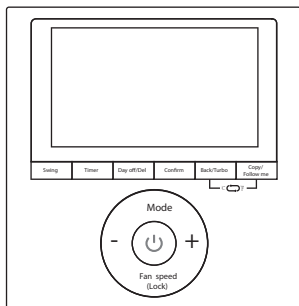

MODEL: KJR-120G1/TFBG-E(5V)


Feature:

- LCD display.
- Malfunction code display: displays the error code (helpful for servicing)
- 4-way wire layout design.
- Room temperature display.
- Weekly Timer

Function:


- Mode: choose Auto-Cool-Dry-Heat-Fan
- Fan speed: Auto-Low-Med-High
- Swing(on some models)
- Timer ON/OFF
- Temp setting
- Weekly Timer
- Follow me
- Child Lock
- LCD Display
- Clock
- Panel function (on some models)

7. WIRED CONTROLLER DISPLAY

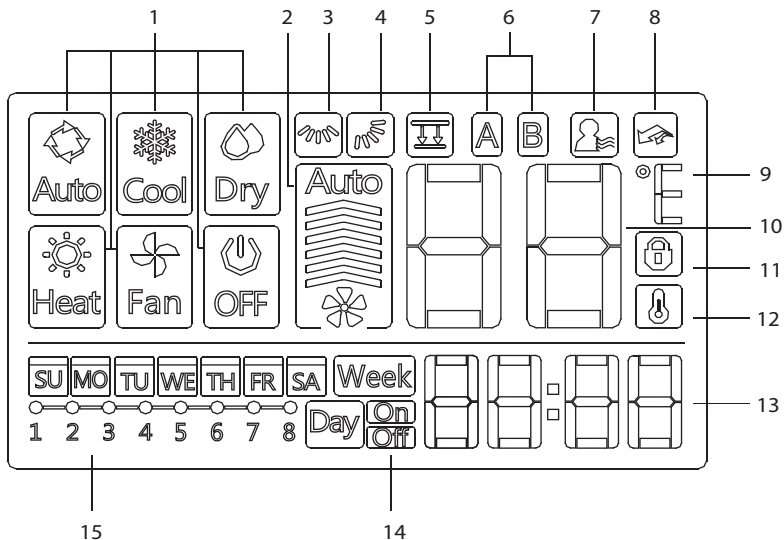

- | | |
|---|--|
| 1. Operation mode indicator | 8. Turbo/Auxiliary Heat function indicator |
| 2. Fan speed indicator | 9. °C / °F indicator |
| 3. Left-right swing indicator | 10. Temperature display |
| 4. Up-down swing indicator | 11. Lock indicator |
| 5. Faceplate function indicator | 12. Room temperature indicator |
| 6. Main unit and secondary unit indicator | 13. Clock display |
| 7. Follow me function indicator | 14. On/Off timer |
| 18 | 15. Timer display |

8. WIRED CONTROLLER BUTTONS

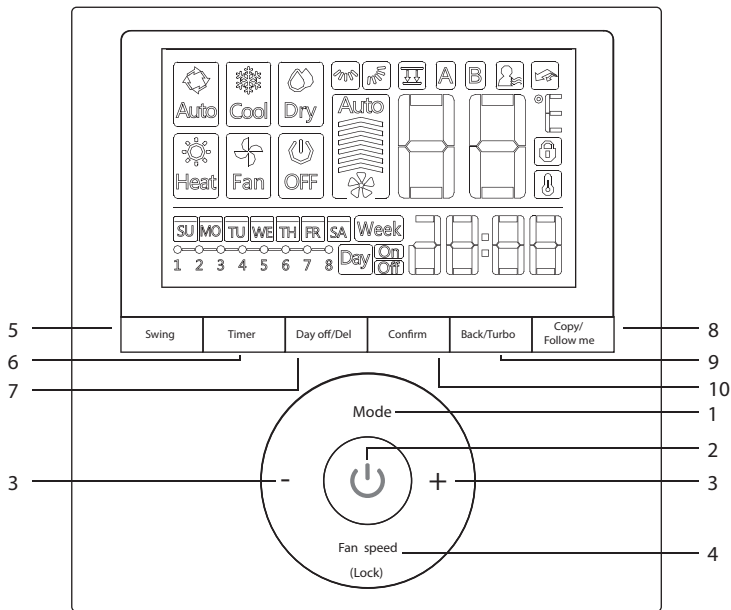




1. Mode
2. Power
3. Adjust
4. Fan Speed
5. Swing


6. Timer
7. Day Off/Del
8. Copy/Follow me
9. Back/Turbo
10. Confirm



9. PREPARATORY OPERATION

 Set the current day and time

- 1  Press **TIMER** for 3s or more. The timer displays flashes.
-

 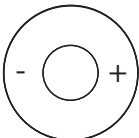- 2  Press + or - to set the date. The selected date flashes.
- 
- The diagram shows a sequence of seven boxes representing days of the week: SU, MO, TU, WE, TH, FR, SA. Arrows point from left to right between each box, and a line connects the SA box back to the SU box, forming a loop.
-

 - 3  Date setting is complete and the time setting is ready after pressing **TIMER** or if nothing is pressed in 10 seconds.
-

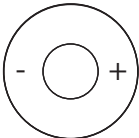- 4  Press + or - to set the current time. Press repeatedly to adjust the current time in 1 minute increments. Press and hold to adjust the current time.
- 
- The diagram shows a digital display with a small box on the left containing 'MO', followed by a colon, and then the numbers '11:20'.
- ex.Monday AM 11:20
-

- 5  The setting is complete after pressing **TIMER** or if no button is pressed for 10 seconds.

10. OPERATION


To start/stop operation




Press the Power button.

To set the operation mode


Operation mode setting

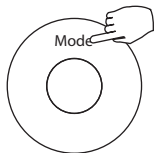

 Press MODE to set the operation mode.
(Heat function is invalid for cool only type unit)




Room temperature setting

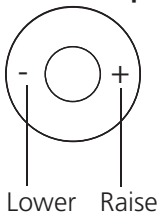

Press + or – to set the room temperature. Indoor
Setting Temperature Range:
62~86°F (17~30°C)/62~88°F (17~31°C (depending
on models)).


10. OPERATION

Fan speed setting

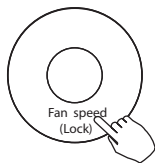




Press **FAN SPEED** to set the fan speed

 NOTE: This function is unavailable in the **AUTO** or **DRY** modes.



Room temperature sensor selection

 
Press **FOLLOW ME** to select whether the room temperature is detected at the indoor unit or at the wired controller.

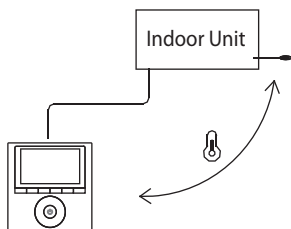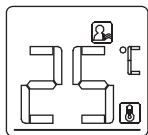


NOTE: When the **FOLLOW ME** function indication  appears, the room temperature is detected at the wire remote controller.

10. OPERATION


Child lock function

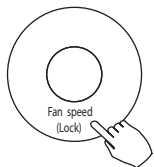

Press **LOCK** for 3 seconds to activate the **CHILD LOCK** feature and lock all buttons on the wired controller. Press again for 3 seconds to deactivate.


NOTE: When the child lock function is activated, the  lock image appears.

 keypad tone setting



Press SWING and TIMER simultaneously for 3 seconds to disable the keypad tone. Press the buttons again for 3 seconds to enable the keypad tone.

 °C & °F scale selection (on some models)



Press BACK and COPY simultaneously for 3 seconds to alternate the temperature display between the °F & °C scale.


10. OPERATION

Turbo/Auxiliary Heat function (on some models)




- Press **TURBO** to activate/deactivate the Turbo/Auxiliary Heat function. The turbo function sets the unit to reach the user's present temperature in the shortest amount of time possible.
- When the user presses **TURBO** in the **COOL** mode, the unit sets to the highest fan speed setting to jump-start the cooling process.
- When the user presses **TURBO** in the **HEAT** mode, for units with **AUX. HEAT**, the AUX. HEAT activates and jump-starts the heating process.

Lift panel function (only for some cassette specific panel)

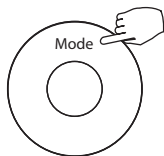

1. When the unit is off, Press the Mode button long to activate the lift panel function. The  mark will flash.

The F2 mark appears when the panel is adjusted.

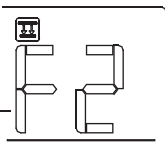


2. Press the button + and - to control the lift and drop of the panel. Pressing the + button can stop the panel, while it is dropping. Pressing the - button can stop the panel, while it is lifting.

10. OPERATION

Swing function

(For the unit with left & right auto swing function only)

 1 Up-Down swing




Press the **Swing** button to start up-down swing function.

Press it again to stop.


When the Up-Down swing function is activated, the  mark appears.

 2 Left-Right swing



Press the **Swing** button long to start Left-Right swing function.

Press it again to stop.

 
When the Left-Right swing function is activated, the  mark appears.


10. OPERATION

Swing function

(For the unit without left & right auto swing function models)


Up-Down airflow direction and swing




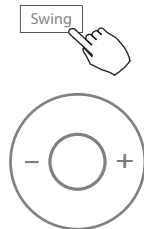
 
- Use **SWING** to adjust the up and down airflow direction.
 1. Every time the user presses **SWING**, the louver swings six degrees.
 2. Press and hold **SWING** for 2 seconds, it changes to the **UP-DOWN SWING** mode. Press **SWING** again to stop.
When the **Up-Down** swing function is activated, the  mark appears. (Not applicable to all the models)

• The operation can refer to the following instructions for the unit with four Up-Down louvers can be operated individually.

1. Press the **Swing** button to activate the **Up-Down** adjusting louver function.

The  mark will flash. (Not applicable to all the models)

2. Pressing the button “+” or “-” can select the movement of four louvers. Each time you push the button, the wire controller select in a sequence that goes from: (the icon  means the four louvers move at the same time.)



3. And then use **Swing** button to adjust the Up-Down airflow direction of the selected louver.

11. TIMER FUNCTIONS

 Week

WEEKLY timer

Use to set the operating times for each day of the week.

 Day On

On timer

Use to start the air conditioner operation. The timer operates and the air conditioner operation starts after the time has passed.

 Day Off

Off timer

Use to stop the air conditioner operation. The timer operates and the air conditioner operation stops after the time has passed.

 Day On Off

On and Off timer

Use to start and stop the air conditioner operation. The timer operates and the air conditioner operation starts and stops after the time has passed.


11. TIMER FUNCTIONS

To set the On or Off TIMER

1  Press **Timer** to select the  or .



2  Press **Confirm** and the Clock display flashes

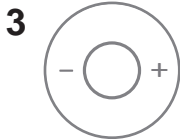

ex. Off timer set at PM 6:00

Press **+** or **-** to set the time. After the time is set, the timer starts or stops automatically.

4  Press **Confirm** again to finish the settings.


11. TIMER FUNCTIONS

To set the On and Off TIMER

1  Press **Timer** to select the .

2  Press **Confirm** and the Clock display flashes.

3   Press the button **+** or **-** to set the **On timer** and then press **Confirm**.

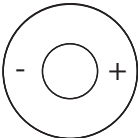4  Press **+** or **-** to set the **Off timer**.

5  Press **Confirm** to finish the setting.


12. WEEKLY TIMER

1 Weekly timer setting



Press **Timer** to select the **Week** and press **Confirm**.


2 Day of the week setting

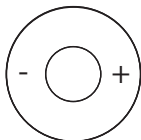

Press **+** or **-** to select the day of the week and then press **CONFIRM**.




3 ON timer setting of timer setting 1

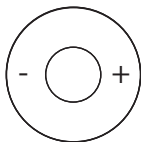

Press **+** and **-** to select the setting time. The setting time, mode, temperature and fan speed appear on the LCD. Press **CONFIRM** to enter the setting time process.

12. WEEKLY TIMER

IMPORTANT: Up to 8 scheduled events can be set on one day. Various events can be scheduled in either **MODE**, **TEMPERATURE** and **FAN** speeds.

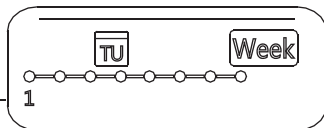

ex. Tuesday time scale 1

4 Time setting

 


Press **+** and **-** to set the time then press **CONFIRM**.

5 Operation mode setting



Press **+** and **-** to set the operation mode then press **CONFIRM**.



6 Room temperature setting

 


Press **+** and **-** to set the room temperature then press **CONFIRM**.

NOTE: This setting is unavailable in the **FAN** or **OFF** modes.


12. WEEKLY TIMER

7 Fan speed setting



Press + and – to set the fan speed then press **CONFIRM**.

 NOTE: This setting is unavailable in the **AUTO**, **DRY** or **OFF** modes.



-
- 8 Different scheduled events can be set by repeating steps 3 through 7.**
 - 9 Additional days, in a one week period, can be set by repeating steps 3 through 8.**

NOTE: The weekly timer setting can be returned to the previous step by pressing **BACK**. The current setting is restored. The controller will not save the weekly timer settings if there is no operation within 30 seconds.


12. WEEKLY TIMER

WEEKLY timer operation

To start



Press **Timer** to select the **Week**, and then the timer starts automatically.

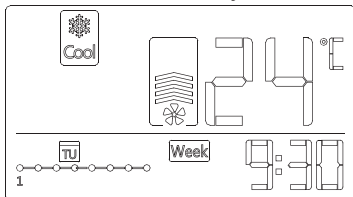

To cancel



Press **Power** to cancel the timer mode.



The timer mode can also be canceled by changing the timer mode using **Timer**.

To set the DAY OFF (for a holiday)



After setting the weekly timer, press **CONFIRM**.



Press **+** or **-** to select the day of the week.

12. WEEKLY TIMER

3



Press **DAY OFF** to create an off day.



ex. The DAY OFF is set for Wednesday

4

Set the **DAY OFF** for other days by repeating the steps 2 and 3.

5



Press **BACK** to revert to the weekly timer.

- To cancel, follow the same procedures used for setup.
- **NOTE:** The **DAY OFF** setting is cancelled automatically after the set day has passed.

Copy out the setting in one day into the other day.

- A scheduled event, made once, can be copied to another day of the week. The scheduled events of the selected day of the week will be copied. The effective use of the copy mode ensures the ease of reservation making.

1



 
In the weekly timer, press **CONFIRM**.

2



Press **+** or **-** to select the day to copy from.

12. WEEKLY TIMER



Press **COPY**, the letters **CY** appear on the LCD.




Press **+** or **-** to select the day to copy to.



Press **COPY** to confirm.

The **WE** mark flashes quickly

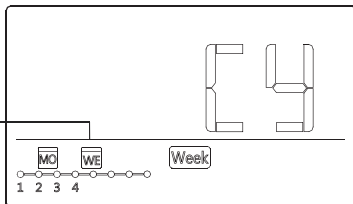

ex. Copy the setting of Monday to Wednesday

6 Other days can be copied by repeating steps 4 and 5.



Press **CONFIRM** to confirm the settings.



Press **BACK** to revert to the weekly timer.

12. WEEKLY TIMER

Delete the time scale in one day.





During the weekly timer setting, press **CONFIRM**.



Press **+** and **-** to select the day of the week and then press **CONFIRM**.



Press **+** and **-** to select the setting time want to delete. The setting time, mode, temperature and fan speed appear on the LCD. The setting time, mode, temperature and fan speed can be deleted by pressing the **DEL** (day off).

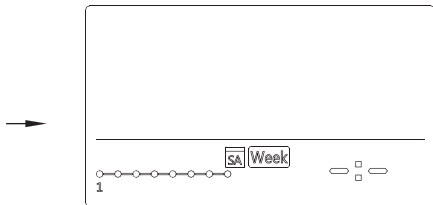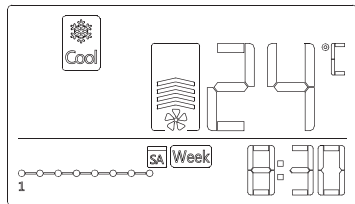

ex. Delete the time scale 1 in saturday

13. FAULT ALARM HANDING

If the system does not properly operate except in the aforementioned cases or the aforementioned malfunctions are evident, investigate the system according to the following procedures.

| NO. | MALFUNCTION AND PROTECTION DEFINITION | DISPLAY DIGITAL TUBE |
|-----|--|----------------------|
| 1 | Communication error between wired controller and indoor unit | F0 |
| 2 | The faceplate is abnormal | F1 |

Please check the indoor unit's error display and review the owner's manual if other error codes appear.

14. TECHNICAL INDICATION AND REQUIREMENT

EMC and EMI comply with the CE certification requirements.

QSXUI-009AEN

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.

16117100A02776

20160312